




DUMMY MORTISE LOCKSET

SINGLE DM 171 SECTIONAL (Surface mounted)

A Door preparation

1. Draw backset vertical line and lever/knob horizontal centerline on door.
2. Apply installation template on door, align backset vertical lines and lever/knob horizontal centerlines.
3. Drill required holes as per template.

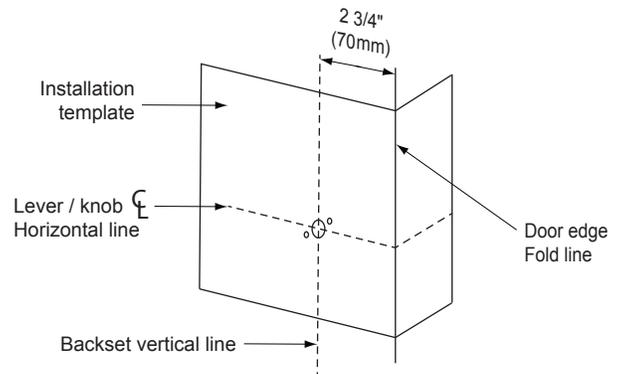

B Installation instructions

1. Place fixed spindle assembly on outside door surface with longer spindle side facing towards the lever/knob.
2. Position mounting plate on fixed spindle and align with predrilled or tapped holes on door.
3. Position spindle so that lever is horizontal and attach the mounting plate and fixed spindle to door using supplied mounting screws.
4. Install lever on mounting plate and tighten using the spanner tool.

